



■TTM型フランジナット寸法表

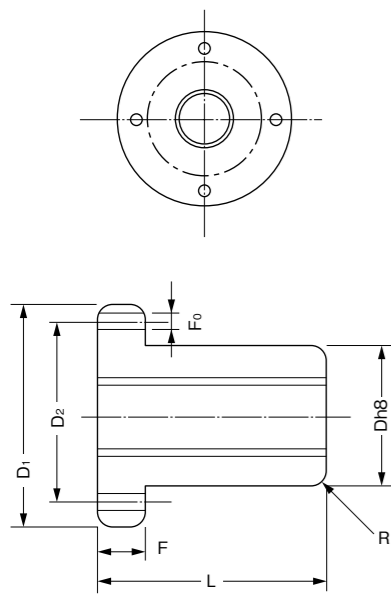

型 式	ピッチ P	主 要 寸 法 (mm)						
		D	L	R	F	D ₁	D ₂	F ₀
TTM 8	1.5	15	20	1	5	30	22	4.3
TTM10	2	20	24	1	5	36	26	4.3
TTM12	2	22	30	1	5	44	31	5.4
TTM14	3	22	30	1	5	44	31	5.4
TTM16	3	28	35	1	6	51	38	6.6
TTM18	4	32	40	1	6	56	42	6.6
TTM20	4	32	40	1	6	56	42	6.6
TTM22	5	36	50	1	7	61	47	6.6
TTM25	5	36	50	1	7	61	47	6.6
TTM28	5	44	56	1.5	8	76	58	9.0
TTM32	6	44	56	1.5	8	76	58	9.0
TTM36	6	52	60	1.5	8	84	66	9.0
TTM40	6	58	70	1.5	10	98	76	11.0
TTM50	8	68	80	1.5	10	109	85	11.0

●TTM8は右ネジのみ。


■STM型ストレートナット寸法表

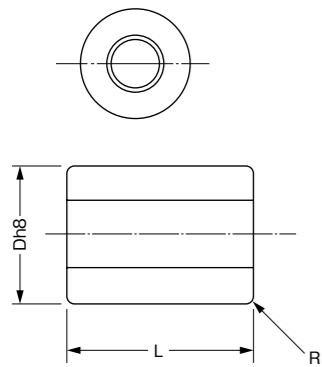

型 式	ピッチ	主 要 寸 法 (mm)		
		D	L	R
STM 8	1.5	15	20	1
STM10	2	20	20	1
STM12	2	22	22	1
STM14	3	22	22	1
STM16	3	28	26	1
STM18	4	32	31	1
STM20	4	32	31	1
STM22	5	36	40	1
STM25	5	36	40	1
STM28	5	44	45	1.5
STM32	6	44	45	1.5
STM36	6	52	49	1.5
STM40	6	58	57	1.5
STM50	8	68	67	1.5

●STM8は右ネジのみ。

■30度台形送りネジ KTM, KTM-OH型フランジナット寸法表

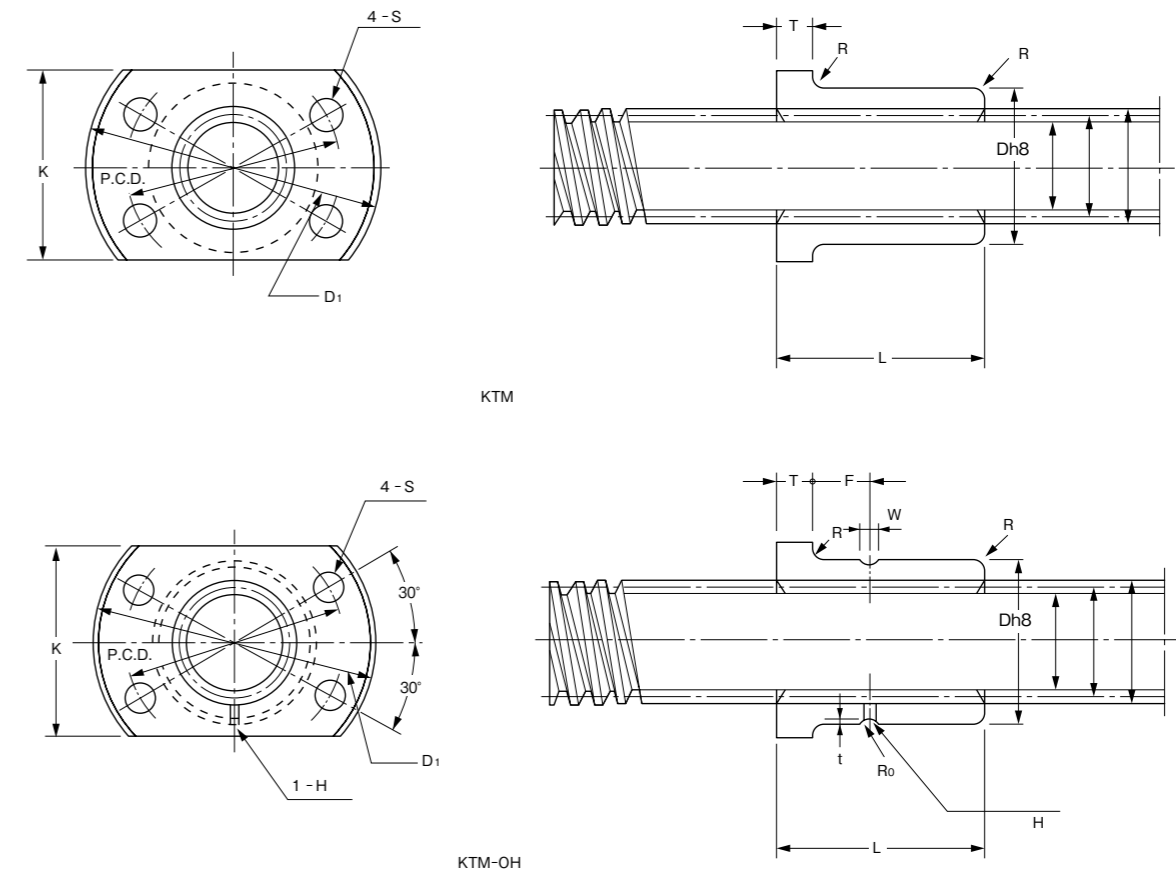

単位：mm

油穴なし	油穴付	型 式	ピッチ P	主 要 寸 法													
				D	D ₁	P.C.D.	K	L	R	T	F	S	H	W	R ₀	t	
	—	KTM 8	1.5	15	30	22	15	20	1	5	—	3.3	1.5	—	—	—	
		KTM10	KTM10-OH	2	20	36	26	22	24	1	5	6	4.3	1.5	2.5	1.8R	0.5
		KTM12	KTM12-OH	2	22	44	31	24	30	1	5	7	5.4	1.5	2.5	1.8R	0.5
		KTM14	KTM14-OH	3	22	44	31	24	30	1	5	7	5.4	1.5	2.5	1.8R	0.5
		KTM16	KTM16-OH	3	28	51	38	31	35	1	6	8	6.6	1.5	2.5	1.8R	0.5
		KTM18	KTM18-OH	4	32	56	42	34	40	1	6	10.5	6.6	2	3	2.5R	0.5
		KTM20	KTM20-OH	4	32	56	42	34	40	1	6	10.5	6.6	2	3	2.5R	0.5
		KTM22	KTM22-OH	5	36	61	47	40	50	1	7	14	6.6	2.5	3.5	2.5R	0.7
		KTM25	KTM25-OH	5	36	61	47	40	50	1	7	14	6.6	2.5	3.5	2.5R	0.7
		KTM28	KTM28-OH	5	44	76	58	48	56	1.5	8	15	9	2.5	3.5	2.5R	0.7
		KTM32	KTM32-OH	6	44	76	58	48	56	1.5	8	15	9	2.5	3.5	2.5R	0.7
		KTM36	KTM36-OH	6	52	84	66	56	60	1.5	8	17	9	3	4	3.2R	0.7
		KTM40	KTM40-OH	6	58	98	76	62	70	1.5	10	19	11.0	3	4	3.2R	0.7

●KTM8は右ネジのみ、および取付穴は2ヶになります。