



■ Square type Support Unit (Fixed support side) SPUT-F series

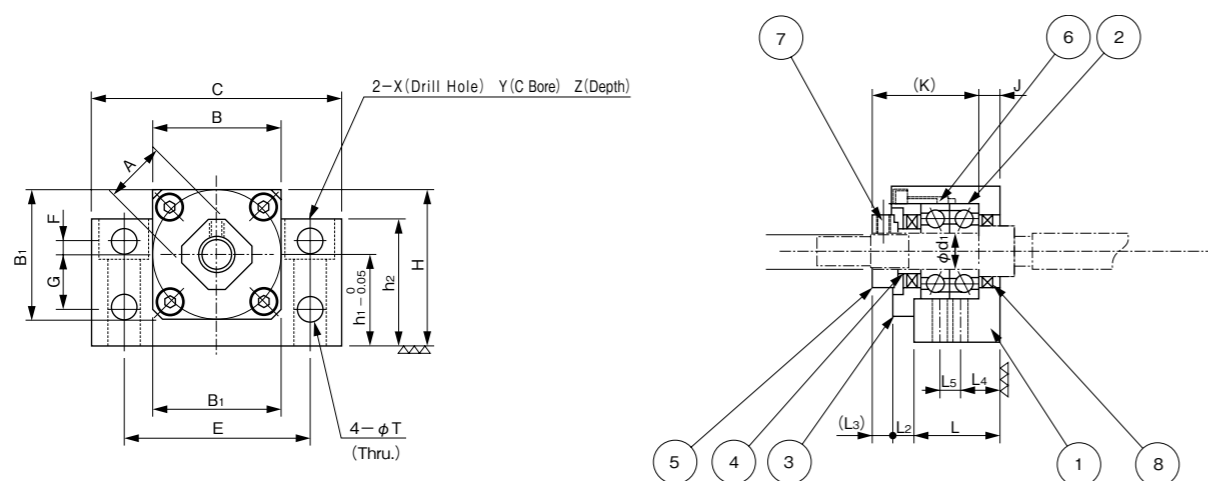

Unit : mm

Identification Number	d ₁	L	L ₂	L ₃	L ₄	L ₅	C	H	h ₁	h ₂	A	B	B ₁	E	F	G	J	K	T	X	Y	Z	Bearing No.
SPUT- 8F	8	20	3	4	10	—	52	32	17	26	13	25	25	38	4	10	4	23	5.5	6.6	11	12	708ADFP5
SPUT-10F	10	24	6	5.5	12	—	70	43	25	35	17	36	36	52	4	15	6	29.5	6.6	9	14	11	7000ADFP5
SPUT-12F	12	25	5	—	6	13	60	42	25	32.5	19	34	34	46	—	18	5	29.5	5.5	6.3	10.5	1.5	7001ADFP5
SPUT-15F	15	27	6	—	6	15	70	47	28	38	22	38	38	54	—	18	6	32	5.5	6.3	10.5	6.5	7002ADFP5
SPUT-17F	17	35	9	—	8	19	86	63	39	55	24	48	48	68	—	28	7	44	6.6	8.7	14	8.6	7203ADFP5
SPUT-20F	20	35	8	—	8	19	88	59	34	50	30	50	50	70	—	22	8	43	6.6	8.7	14	8.5	7204ADFP5
SPUT-25F	25	42	12	—	10	22	106	79	48	70	35	62	62	85	—	33	9	54	9	10.7	17.5	10.8	7205ADFP5
SPUT-30F	30	45	14	—	11	23	128	88	51	78	40	74	74	102	—	33	9	61	11	13.7	20	13	7206ADFP5
SPUT-35F	35	50	14	—	12	26	140	95	52	79	50	86	86	114	—	35	12	67	11	13.7	20	13	7207ADFP5
SPUT-40F	40	61	16	—	14	33	160	109	60	90	50	98	98	130	—	37	15	76	14	17.7	26	17.5	7208ADFP5

■ Square type Support Unit (Simple support side) SPUT-S series

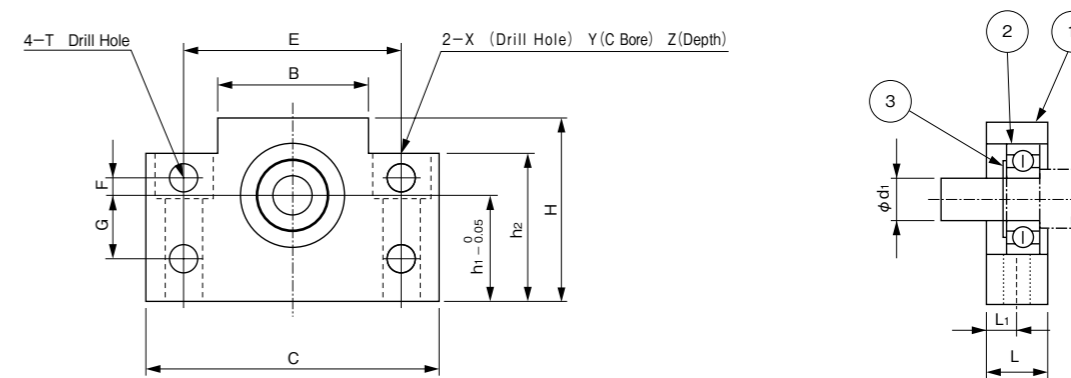

Unit : mm

Identification Number	d ₁	L	L ₁	C	H	h ₁	h ₂	B	E	F	G	T	X	Y	Z	Bearing No.	Retaining ring
SPUT- 8S	6	15	7.5	52	32	17	26	25	38	4	10	5.5	6.6	11	12	606ZZ	C6
SPUT-10S	8	20	10	70	43	25	35	36	52	4	15	6.6	9	14	11	608ZZ	C8
SPUT-12S	10	20	10	60	43	25	32.5	34	46	—	10.5	5.5	6.3	10.8	1.5	6000ZZ	C10
SPUT-15S	15	20	10	70	48	28	38	40	54	—	8	5.5	6.3	11	6.5	6002ZZ	C15
SPUT-17S	17	23	11.5	86	64	39	55	50	68	—	12	6.6	8.7	14	8.6	6203ZZ	C17
SPUT-20S	20	26	13	88	60	34	50	52	70	—	6	6.6	8.7	14	8.6	6004ZZ	C20
SPUT-25S	25	30	15	106	80	48	70	64	85	—	11	9	10.7	17.5	11	6205ZZ	C25
SPUT-30S	30	32	16	128	89	51	78	76	102	—	6	11	13.7	20	13	6206ZZ	C30
SPUT-35S	35	32	16	140	96	52	79	88	114	—	8	11	13.7	20	13	6207ZZ	C35
SPUT-40S	40	37	18.5	160	110	60	90	100	130	—	7	14	17.7	26	17.5	6208ZZ	C40

Part No.	Part Name	Quantity	Remarks
1	Housing	1	
2	Bearing	1set	
3	Plate	1	
4	Spacer	2	1pc.for SPUT-8F~10F
5	Lock Nut	1	
6	Screw thread	4	countersunk head screw for SPUT-8F Hexagon socket head cap screw for SPUT-10~40F
7	Set Screw	2	A brass piece is attached. (1pc.for SPUT-8F&10F)
8	Oil seal	2	Not available for SPUT-8F

1. Do not disassemble Support Units adjusted on proper preload.
2. Bearings in Support Units are greased properly.
3. After having fastened shaft end with a lock nut, put a brass piece into a drilled hole before tightening with a set screw slightly.

Part No.	Part Name	Quantity
1	Housing	1
2	Bearing	1
3	Snap ring	1